

[illegible]

TS50 Utility V1.2.8_B2026051400 - Disconnected

Reader Mode | **Reader Setting**

Region: Europe (865.7 ~ 867.5)

RF Power: 1 dbm

Keyboard Layout Language

USB Type: HID + Keyboard

HID + Keyboard

Virtual COM

Auto Encode Test

Connect Prev. Setting ... Save Setting Exit

TS50 Utility V1.2.8_B2026051400 - Connect to TS50

Reader Mode Reader Setting

Region:
Japan (916.8 ~ 923.2)

RF Power:
9 dbm

Keyboard Layout Language
Japanese [日本語 (日本)]

USB Type:
Virtual COM

☐ Buzzer

Exit this program to run TS50 in operating mode

Auto Encode Test

Disconnect Prev. Setting ... **Save Setting** Exit

[illegible]

TS50 Utility V1.2.8.8_82026051400 - Disconnected

COMポートに接続

Reader Mode: ☒ Read Mode ☐ Analyze Mode ☐ Encode Mode

Read output: ☐ EAN / ☐ ADI ☒ Tag Data

Field Separator: Prefix: Suffix: Delimiter: Sample:

Select a device to connect with.

- COM4
- COM5
- COM7
- COM12
- COM14

Auto Encode Test

Connect Prev. Setting ... Save Setting Exit

▼ ポート (COM と LPT)

- Bluetooth リンク経由の標準シリアル (COM4)
- Bluetooth リンク経由の標準シリアル (COM5)
- DENSO WAVE Active USB-COM Port (COM12) - Disconnected
- DENSO WAVE Active USB-COM Port (COM7) - Disconnected
- **USB シリアル デバイス (COM14)**